

CHEFMAN®

RJ38-V2-35T

3.5-LITER DIGITAL AIR FRYER



CUSTOMER SERVICE: 888.315.6553 | customerservice@chefman.com

Congratulations on your purchase!

Every Chefman product is manufactured to the highest standards of performance and safety, and we are confident that you will be so satisfied with your purchase that Chefman will be your go-to company for appliances in the future.

Customer satisfaction is a key element of our company's philosophy. The Chefman brand exists to fill a void on retail shelves and in consumer kitchens for a truly value-focused kitchen appliance. By questioning and adding value and innovation at every touch point in the manufacturer to end user journey, Chefman provides home chefs with the tools they need to achieve picture-perfect results with maximum efficiency. In addition to manufacturing appliances that are dependable, affordable, and built with intuitive features to enhance your kitchen experience, we pride ourselves on providing top-of-the line post purchase support, which includes complimentary access to ClubChefman.com for product tutorials, delicious recipes & how-to videos, and access to our team of dedicated Chefs.

Should a problem arise, each product is backed by a comprehensive manufacturer's 1-year warranty as well as outstanding after-sales service support through our dedicated customer service team. In the unlikely event that your product does not operate as described in the manual please feel free to call or email our helpline for assistance. We understand that sometimes products can malfunction, so if you feel that your appliance is not operating as it should, warranty claims can be made within one year from the date of purchase when accompanied by a dated receipt.

This guarantee is in addition to your statutory rights; your statutory rights are not affected. This limited warranty does not apply in cases of damage caused by accident, improper use, abuse or force majeure.

This warranty gives you specific legal rights. Rights may vary depending on your state or province of residence. Some locations do not allow limitations on implied warranties or special incidental, or consequential damages, so the limitations may not apply to you. This limited warranty will be invalidated if the appliance is tampered with in any way whatsoever.

Our telephone helpline (888) 315-6553 is available for questions or technical assistance-Monday-Friday 9am to 5 pm EST.

Customers can also receive support via email: customerservice@chefman.com.



READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.

Contents

- 1** Safety Instructions
- 4** Features
- 5** Operating Instructions
- 9** Troubleshooting
- 10** Cleaning and Maintenance
- 11** Terms and Conditions
- 12** Warranty Card

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

WARNING: When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. This appliance should be used only by persons who are capable of understanding the user guide or are supervised by those who have adequate understanding of the appliance's features, use and operating instructions. Children must be supervised and should not be left alone with any appliance during operation.
2. Never use any accessories or parts from other **manufactures**. Your warranty will become invalid if such accessories or parts have been used.
3. Place the Air Fryer on a stable, heat resistant surface. Make sure not to place it near or on **a heat source** such as a gas or electric **burner**, or oven. Do not use near an open flame or flammable **materials**.
4. Appliances may emit heat or steam when in use; do not to block inlets or outlets.
5. Short power cords are attached to the Air Fryer to prevent entanglement and tripping hazards. Extension cords with corresponding voltage, electrical rating and grounding wires can be used. Care should be taken so that any exposed cord is not hanging down from a counter or table where it can be pulled on or tripped over by any child or adult.
6. Check that your home power supply corresponds with the Air Fryer's intended voltage.
7. Before using the Air Fryer, inspect the plug and cord line for cuts and/or abrasion marks. Do not use the Air Fryer if it is damaged in any way. Contact Chefman Customer Service for assistance.
8. Insert the plug by grasping it firmly and guiding it into your home's grounded **electric** outlet. Disconnect by grasping the plug and removing it from your home's grounded **electric** outlet. Never wrap the cord tightly around the appliance during use or storage; this may cause the wire to fray and break.
9. This product is not a deep fryer. It is NOT meant to be filled with oil. Never fill the basket or any parts of the Air Fryer with oil. If you choose to use oil, toss food with oil in a separate bowl and then transfer food to the air fryer basket.

SAFETY INSTRUCTIONS

10. Do not leave uncooked ingredients in the Air Fryer for more than a short period of time. Raw meat, poultry, fish, fruits or vegetables can spoil.
11. Do not move the Air Fryer if it is full of food.
12. During initial use, you may notice some smoke and/or a slight odor. This is normal and should quickly dissipate. It should not reoccur after the appliance has been used a few more times.
13. Do not leave Air Fryer unattended during use.
14. Do not move Air Fryer during use.
15. The exterior of the Air Fryer is designed to be cool to the touch. Some areas do get HOT during use. Do not touch the heating elements. Do not place hands or other body parts near the air vents while Air Fryer is in use. Burns may result. Take caution when handling the hot air fryer basket and tray.
16. Use protective gloves and/or tongs to remove hot food from the Air Fryer.
17. Unplug the Air Fryer when you are done cooking.
18. Before cleaning, make sure that the Air Fryer is turned off, unplugged and cooled to room temperature.
19. Do not immerse Air Fryer in water or a dishwasher for cleaning. Only the air fryer basket and tray, (not the Air Fryer's housing) may be washed with a sponge and warm, soapy water. The air fryer basket and tray are also top-rack dishwasher safe.
20. The Air Fryer housing is NOT dishwasher safe.
21. Use a non-abrasive cleaner, soft pad or cloth to clean both the air fryer basket, tray and exterior of the Air Fryer. Do not use a scouring pad.
22. Store Air Fryer in a cool, dry location.
23. In case of any electric emergency, such as a fire, call 911.

SAFETY INSTRUCTIONS

WARNING: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and:
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.



DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

CAUTION: To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.

IMPORTANT: During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Features

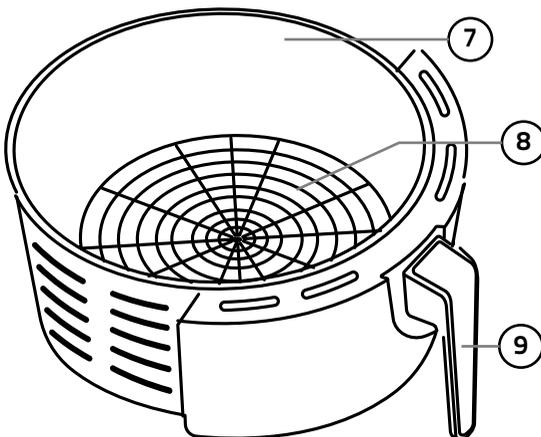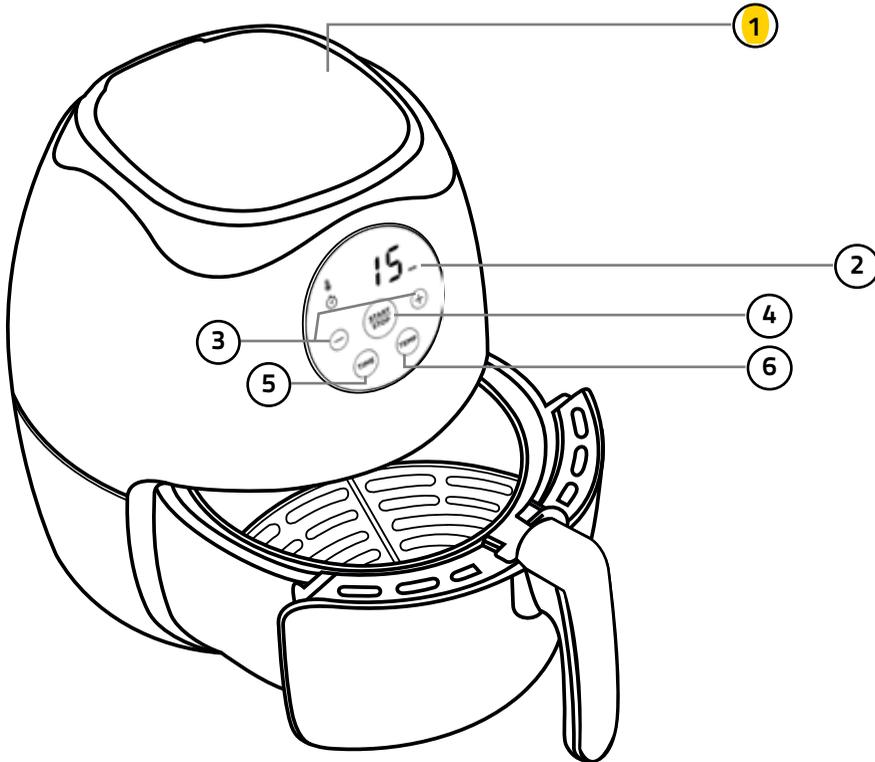

1. AIR FRYER
2. CONTROL PANEL/DISPLAY
(ROTATES WITH TIME AND TEMP)
3. -/+ BUTTONS
3. AIR FRYER BASKET
4. START/STOP BUTTON
5. TIME BUTTON
6. TEMP BUTTON
7. AIR FRYER BASKET
8. TRAY (REMOVABLE)
9. BASKET HANDLE

Operating Instructions

BEFORE FIRST USE

Remove all packing materials and stickers from the inside and outside of the Air Fryer. Gently wipe down exterior with a damp cloth or paper towel. Never immerse the Air Fryer or its plug in water or any other liquid. It is NOT dishwasher safe.

Use the basket handle to remove the air fryer basket from the Air Fryer. Use the handle in the center of the tray to remove the tray. Use a sponge and warm, soapy water to wash the inside and outside of the air fryer basket and tray. Do not use abrasive cleaning agents or scouring pads. The air fryer basket and the tray are top-rack dishwasher safe. **Always** dry thoroughly.

Read all instructions and follow them carefully.

HOW TO USE

1. Prepare the air fryer basket.

Use the handle in the center of the tray to insert it into the air fryer basket. Press down to ensure it is secure and in a leveled position. There should be a small amount of space between the tray and bottom of the air fryer basket.

Important Note: Do not use the air fryer basket without the tray. The tray allows for proper air circulation, which promotes even cooking.

CAUTION: Never fill the air fryer basket with oil. Unlike deep fryers, air fryers require little to no oil to produce crispy results. If you choose to use oil, toss food with oil in a separate bowl and then transfer food to the air fryer basket.

Tip: Oil promotes browning and extra-crispy results. Use a couple of teaspoons when making foods from scratch like French fries or chicken nuggets.)

2. Place food on tray.

Refer to the chart on page **XX** for recommended minimum and maximum amounts for many types of food. Never fill the air fryer basket higher than the “Max” line embossed on the inside of the air fryer basket.

Refer to the chart on page **XX** for recommended cooking times, temperatures and tips.

3. Put the air fryer basket into the Air Fryer.

Use the basket handle to insert air fryer basket into the Air Fryer. Push closed.

Operating Instructions

4. Plug in the Air Fryer.

The entire display will illuminate for a moment and then flash off. The Start/Stop button will remain illuminated.

NOTE: The Air Fryer will not turn on if the air fryer basket is not fully in place in the closed position.

5. Turn on the Air Fryer.

Lightly press the Start/Stop button to “wake” the Air Fryer. Once the Air Fryer is in wake mode, the time and temperature will toggle back and forth on the display and all buttons will be illuminated. You may now set your desired cooking time and temperature.

Note: After **XX minutes** of inactivity, the Air Fryer will enter sleep mode. Wake by lightly pressing the Start/Stop button.

6. Set desired cooking time and temperature.

Adjust the Time:

Lightly press the Time button. The little clock icon located on the left of the displayed time will blink. Lightly press the - or + buttons to select desired time.

Maximum cooking time is 60 minutes.

Adjust the Temperature:

Lightly press the Temp button. The little thermometer icon located on the left of the temperature displayed will blink. Lightly press the - or + button to select desired temperature.

Minimum temperature is 160°F and 80°C. Maximum temperature is 400°F and 200°C.

Change the Temperature from Fahrenheit to Celsius:

Lightly press and hold the Temp button for two seconds. The little °F located to the right of the **temperature displayed** will change to °C. Repeat to switch back to Fahrenheit.

Operating Instructions

7. Start cooking.

After setting the time and temp, press the Start/Stop button to start cooking. While the Air Fryer is cooking, all of the buttons will remain illuminated and the temperature and remaining time will toggle on the display.

To check the food while the Air Fryer is cooking, use the basket handle to gently pull out the air fryer basket. All of the buttons will turn off once you pull out the basket, but **your** program will be saved for **XX** minutes. Use the basket handle to shake and redistribute the food inside the air fryer basket, if necessary, and push the air fryer basket closed. The unit will automatically resume cooking when the basket is replaced.

8. Enjoy your delicious air-fried food!

Once the timer completely counts down, the Air Fryer and the screen will turn off; **only** the Start/Stop button will remain illuminated. The Air Fryer will also beep loudly 3 times, indicating that it is done cooking.

Use the basket handle to pull out the air fryer basket. Use protective gloves and/or tongs to carefully transfer the hot food to a serving plate.

CAUTION: The air fryer basket will be hot after cooking.

Place the hot air fryer basket on a wire rack or trivet to cool.

9. **Unplug the Air Fryer.**

Operating Instructions

Please see table below for tips on how to prepare different foods.

NOTE: This table is only a guide and does not contain exact recipes.

NOTE: Use extreme caution while handling hot food in fryer basket and tank. Excess oil will drip into tank when preparing greasy foods.

Type	Min to Max Amount	Time (mins)	Temp (°F)	Shake	Cooking Tip
Thin Frozen Fries	100-400g	9-16	390	Yes	
Thick Frozen Fries	100-400g	11-20	390	Yes	
Homemade Fries	100-400g	16-20	390	Yes	Add 1/2 tablespoon of oil
Homemade Potato Wedges	100-400g	18-22	360	Yes	Add 1/2 tablespoon of oil
Homemade Potato Cubes	100-350g	12-18	360	Yes	Add 1/2 tablespoon of oil
Rösti	250g	15-18	360	Yes	
Potato Gratin	400g	15-18	390	Yes	
Steak	100-400g	8-12	360	No	
Pork Chops	100-400g	10-14	360	No	
Hamburger	100-400g	7-14	360	No	
Sausage Roll	100-400g	13-15	390	No	
Drumsticks	100-400g	18-22	360	No	
Chicken Breast	100-400g	10-15	360	No	
Spring Rolls	100-400g	8-10	390	Yes	Use oven-ready
Frozen Chicken Nuggets	100-400g	6-10	390	Yes	Use oven-ready
Frozen Fish Fingers	100-400g	6-10	390	No	Use oven-ready
Frozen Breaded Cheese Snacks	100-400g	8-10	360	No	Use oven-ready
Stuffed Vegetables	100-400g	10	320	No	
Cake	300g	20-25	320	No	Use baking tin
Quiche	400g	20-22	360	No	Use baking tin/oven dish
Muffins	300g	15-18	390	No	Use baking tin
Sweet Snacks	400g	20	320	No	Use baking tin/oven dish

Tips

COOKING TIPS

- Almost any food you cook in the oven, can be **cooked in an air fryer!**
- Avoid cooking very greasy foods that splatter, such as sausage, on high temperatures in the Air Fryer. A temperature of 350°F is recommended.
- Foods cook best and most evenly when they are of similar size and thickness.
- Smaller pieces of food require less cooking time than larger items.
- Smaller pieces of food may be cooked at higher temperatures of food than larger items because they generally require less time to cook.
- For best results in the shortest amount of time, air fry food in small batches. Avoid stacking or **layering when** possible.
- Most prepared foods do not need to be tossed in oil before air frying. Most already contain oil and other ingredients that enhance browning and crispiness.
- Frozen appetizers and hors d'oeuvres air fry very well. For best results, arrange them on the Air Fryer's tray in a single layer.
- If layering foods, be sure to shake the air fryer basket halfway through to promote even cooking.
- Toss foods you are preparing from scratch, such as French fries, with oil, in a separate bowl, to **promote** browning and crispiness. Fresh foods do not contain the same oils, fats and other ingredients that prepared foods contain which promote browning and crispiness.
- When making French fries using fresh potatoes, ensure they are completely dry before cooking in the Air Fryer. Even the smallest droplets of moisture will prevent them from getting crispy.
- When air frying battered food, stick to thick, pasty batters. Thin batters, such as the batters used to make tempura, will run and not set fast enough like they do in a deep fryer.
- Coating battered foods in panko (Japanese-style breadcrumbs) or puffed rice, and then spraying them with oil, help create crispy, healthier versions of your favorite fried foods.
- Air fryers are great for reheating food. To reheat your food, set the temperature to 300°F for up to 10 minutes. Use a thermometer to ensure it reaches **food safe** temperatures.

Troubleshooting Guide

Problem	Possible Cause	Solution
The air fryer is not working/will not turn on	The appliance is not plugged in	Insert plug into the electrical outlet
	The timer was not set	Press the time button and adjust +/- to the desired cook time and press START to switch the appliance on
The ingredients fried with the air fryer are not done	The basket is overcrowded	Put smaller batches of ingredients in the basket to fry more evenly
	The set temperature is too low	Press the temperature button and adjust +/- to a higher temperature
The ingredients are fried unevenly in the air fryer	Certain ingredients need to be shaken halfway through	Shake halfway through the preparation time
Fried snacks are not crispy when they come out of the air fryer	The snack was meant to be prepared in a traditional deep fryer	Lightly brush or spray some oil onto the snacks for a crispier result
The basket will not slide into the appliance properly	Too many ingredients in the basket	Do not fill the basket beyond the MAX indication
	Basket is not placed in the air fryer correctly	Push the basket into the fryer until you hear a click
There is white smoke coming out of the air fryer	Greasy ingredients are being prepared	Frying greasy ingredients causes a large amount of oil to leak into the basket. This will produce smoke but does not affect the appliance or cooking of your food.
	The pan still contains grease residues from previous use	Make sure the basket is cleaned properly after use. The basket is dishwasher-safe
Fresh french fries are fried unevenly in the air fryer	The wrong type of potato was used	Use fresh potatoes and make sure that they stay firm during frying
	Sliced potatoes were not rinsed properly before air frying	Rinse the potato sticks fully in cold water to remove the starch
Fresh french fries are not crispy when they come out of the air fryer	The crispiness of the fries depends on the amount of oil and water in the fries	Make sure to full dry the slices of potato before adding any oil or spices
		Cut the potato sticks smaller for a crispier result
		Add a little oil for a crispier result

Cleaning & Maintenance

- Ensure that the Air Fryer is unplugged before cleaning.
- Once the Air Fryer and air fryer basket are cool, remove the air fryer basket from the Air Fryer (if it is not already removed.) Use the handle in the center of the tray to remove the tray. Use a sponge and warm, soapy water to wash the inside and outside of the air fryer basket and tray. Do not use abrasive cleaning agents or scouring pads. The air fryer basket and the tray are top-rack dishwasher safe. Always dry thoroughly.
- Gently wipe down exterior with a damp cloth or paper towel. Never immerse the Air Fryer or its plug in water or any other liquid. It is NOT dishwasher safe.
- Store the Air Fryer in a cool, dry place

Terms & Conditions

Limited Warranty

CHEFMAN® LLC warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of ONE (1) year. CHEFMAN® LLC, at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, CHEFMAN® LLC will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase. If product is no longer available we will replace it with a product of equal value. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V - 60 Hz).

This warranty is available to consumers only. You are a consumer if you own a CHEFMAN® product that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

CONDITIONS: This warranty is valid for the original USA and Canada retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty. Warranty registration is not necessary to obtain warranty on CHEFMAN® LLC Products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, 3rd party warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product; improper voltage or current; use contrary to the operation instructions; deviation from instructions regarding storage and transportation; repair or alteration by anyone other than CHEFMAN® LLC or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. CHEFMAN® LLC shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: If your CHEFMAN® product should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply email customerservice@chefman.com or call our toll-free number 1-888-315-6553 for additional information from our Customer Service Representatives, or send the defective product to Customer Service at Chefman, 200 Performance Drive Suite 207, Mahwah, NJ 07495.

This warranty is effective for the time periods listed above and subject to the conditions provided for within this policy.

CALIFORNIA RESIDENTS ONLY:

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store which sells CHEFMAN® products of the same type. The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. CHEFMAN® and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

CHEFMAN® is a registered trademark of RJ BRANDS, LLC.

Warranty



3.5-LITER DIGITAL AIR FRYER



All data fields are required in order for us to process your request:

Model Number: _____

Full Name: _____

Address: _____

Phone: _____ Email: (if applicable) _____

Date of Purchase*: _____

*We recommend you keep the receipt with this warranty card

Retail Store of Purchase: _____

Description of Malfunction:

Return your completed warranty card to:

RJ Brands
200 Performance Drive
Suite 207
Mahwah, NJ
07495

3.5-LITER
DIGITAL AIR FRYER

MODEL:
RJ38-V2-35T

888.315.6553

customerservice@chefman.com

Phone lines available Monday to Friday, 9am-5pm EST

1-YEAR LIMITED WARRANTY

CHEFMAN®



CLUBCHEFMAN.COM | CHEFMAN.COM | @MYCHEFMAN